 


Mono-split WALL-MOUNTED air conditioner

EN

Indoor unit = UME 20 / 25 / 35 / 50 / 70

Outdoor unit = MOSE 20 / 25 / 35 / 50 / 70

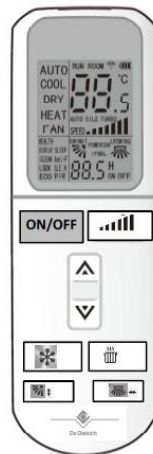


**User
guide**

Table of contents

Wireless remote control.....	3
Description of the keys on the outside of the remote control.....	5
Description of the keys on the inside of the remote control	7
Operation	10

 Wireless remote control User Guide

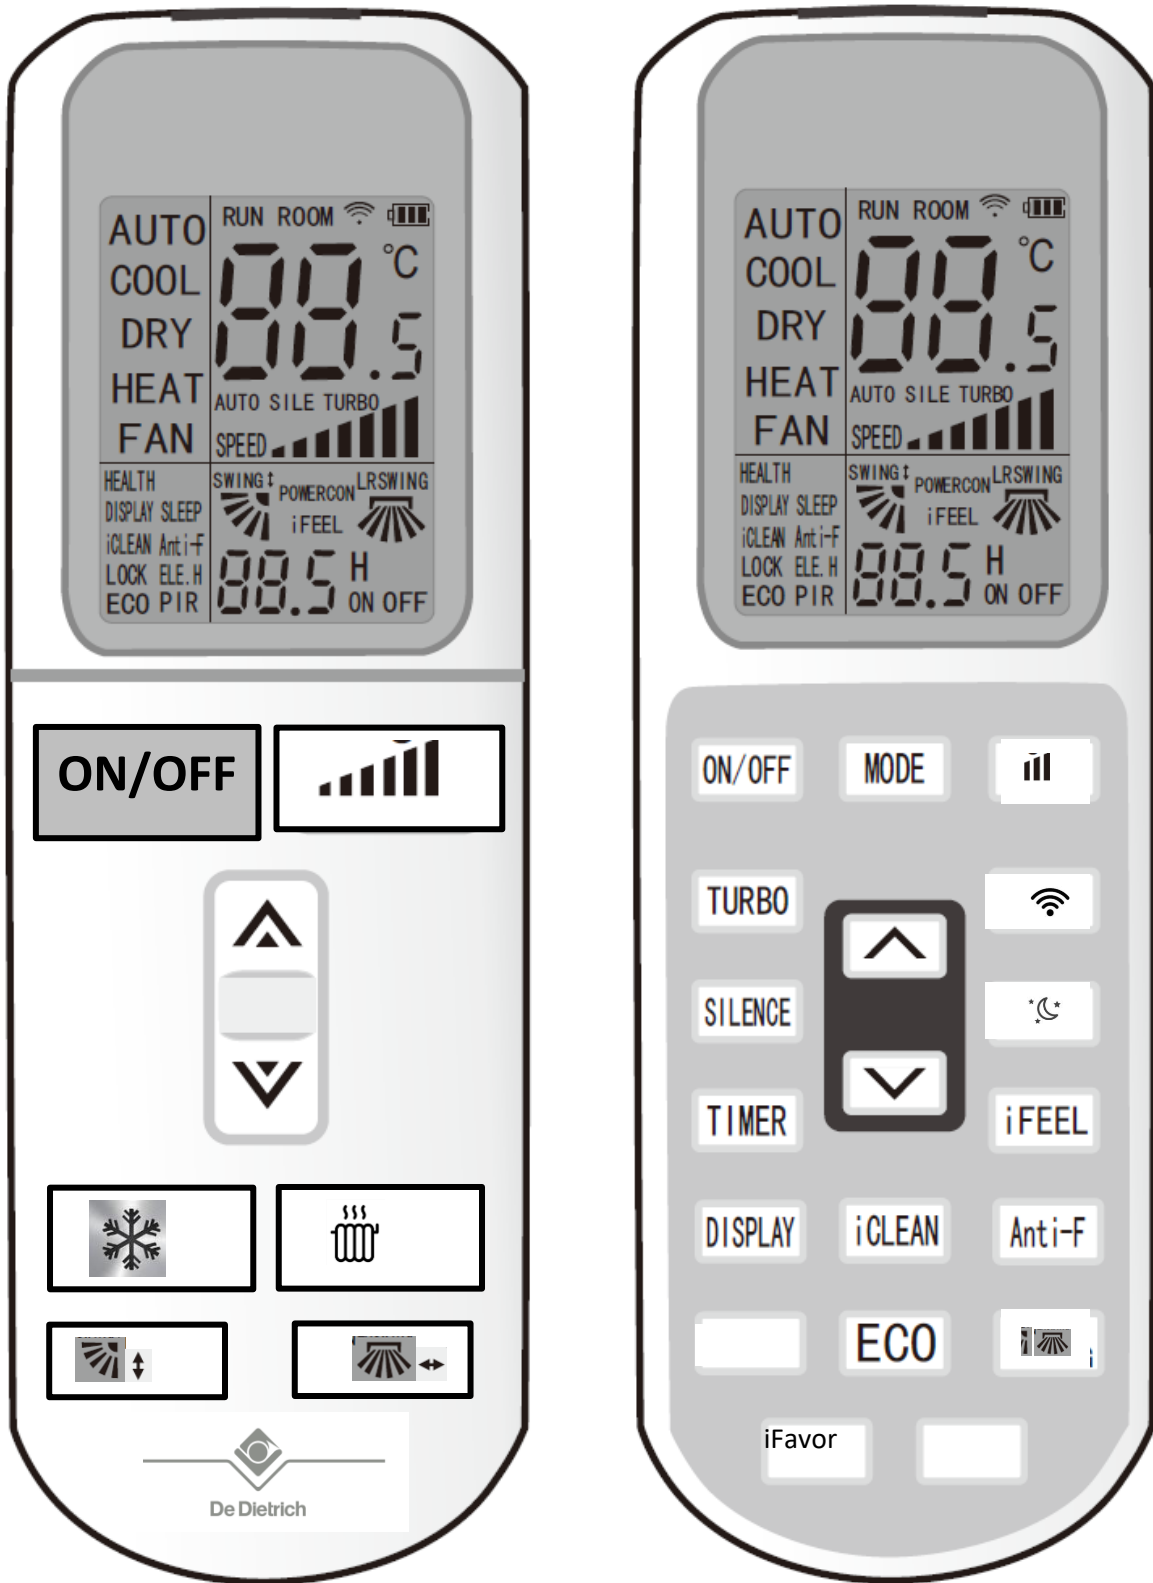

- Read this "operating manual" carefully to ensure safe and correct use of the air conditioner.

 
1. Point the remote control at the receiver on the air conditioner.
2. The remote control should be less than 8 metres from the receiver.
3. No obstacle between the remote control and the receiver.
4. Do not drop or throw the remote control.
5. Do not leave the remote control in direct sunlight or near to a heat source.
6. Use 2 AAA batteries (not rechargeable).
7. Remove the batteries from the remote control if it will not be used for a long period.
8. Replace the batteries when the transmission signal can no longer be heard and the transmission symbol appears on the screen.
9. If the reset process occurs when the on/off button is pressed, the power supply is insufficient. Replace the batteries.
10. Used batteries should be disposed of properly.

Note:

- The remote control image includes all the function buttons. They may be active depending on the model.
- All the above icons are displayed when the power is switched on, but only the icons in use remain.

Description of the keys on the outside of the remote control

Signal transmission

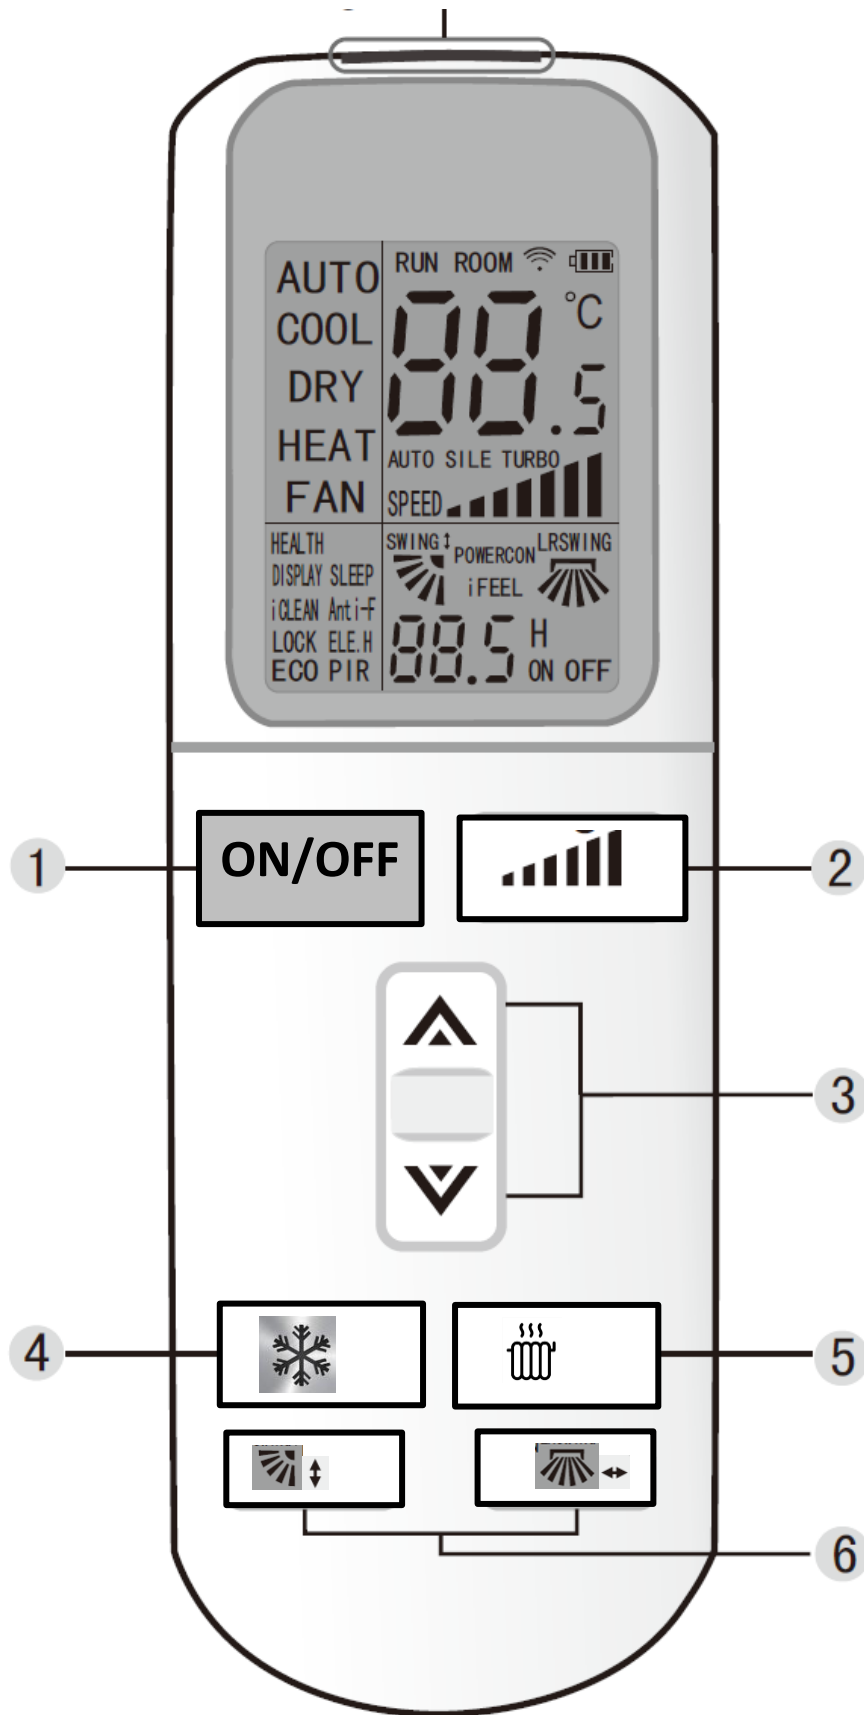

Note: the keys on the outside of the remote control are valid when the door is closed.

 
Description of the keys

1. "ON/OFF" key.



- Press the key. The unit will start or stop, which may delete the timer or the sleeping function.

2. " " key.

- Press the key. The speed changes:



3. " / " keys.

- Press the  key. The temperature increases by 0.5 °C.
- Press the  key. The temperature decreases by 0.5 °C.
- The temperature changes rapidly when the key is held down, and the temperature range is from 16 °C to 32 °C.



 
4. " " key.

- Press the **COOL** key. The mode is activated.


5. " " key.

- Press the **HEAT** key. The mode is activated.

6. " ↔ / ↑↓ " keys

- "  ↔ " The key is active on models with the left/right switching function.
- Press the "  ↔ /  ↑↓ " keys to activate left/right or up/down switching mode. Press again to lock the shutter.
- The position of the shutters can only be adjusted in this mode.
- Switching has a memory function. It stores the setting when you switch on/off or to a different mode.

 Description of the keys on the inside of the remote control

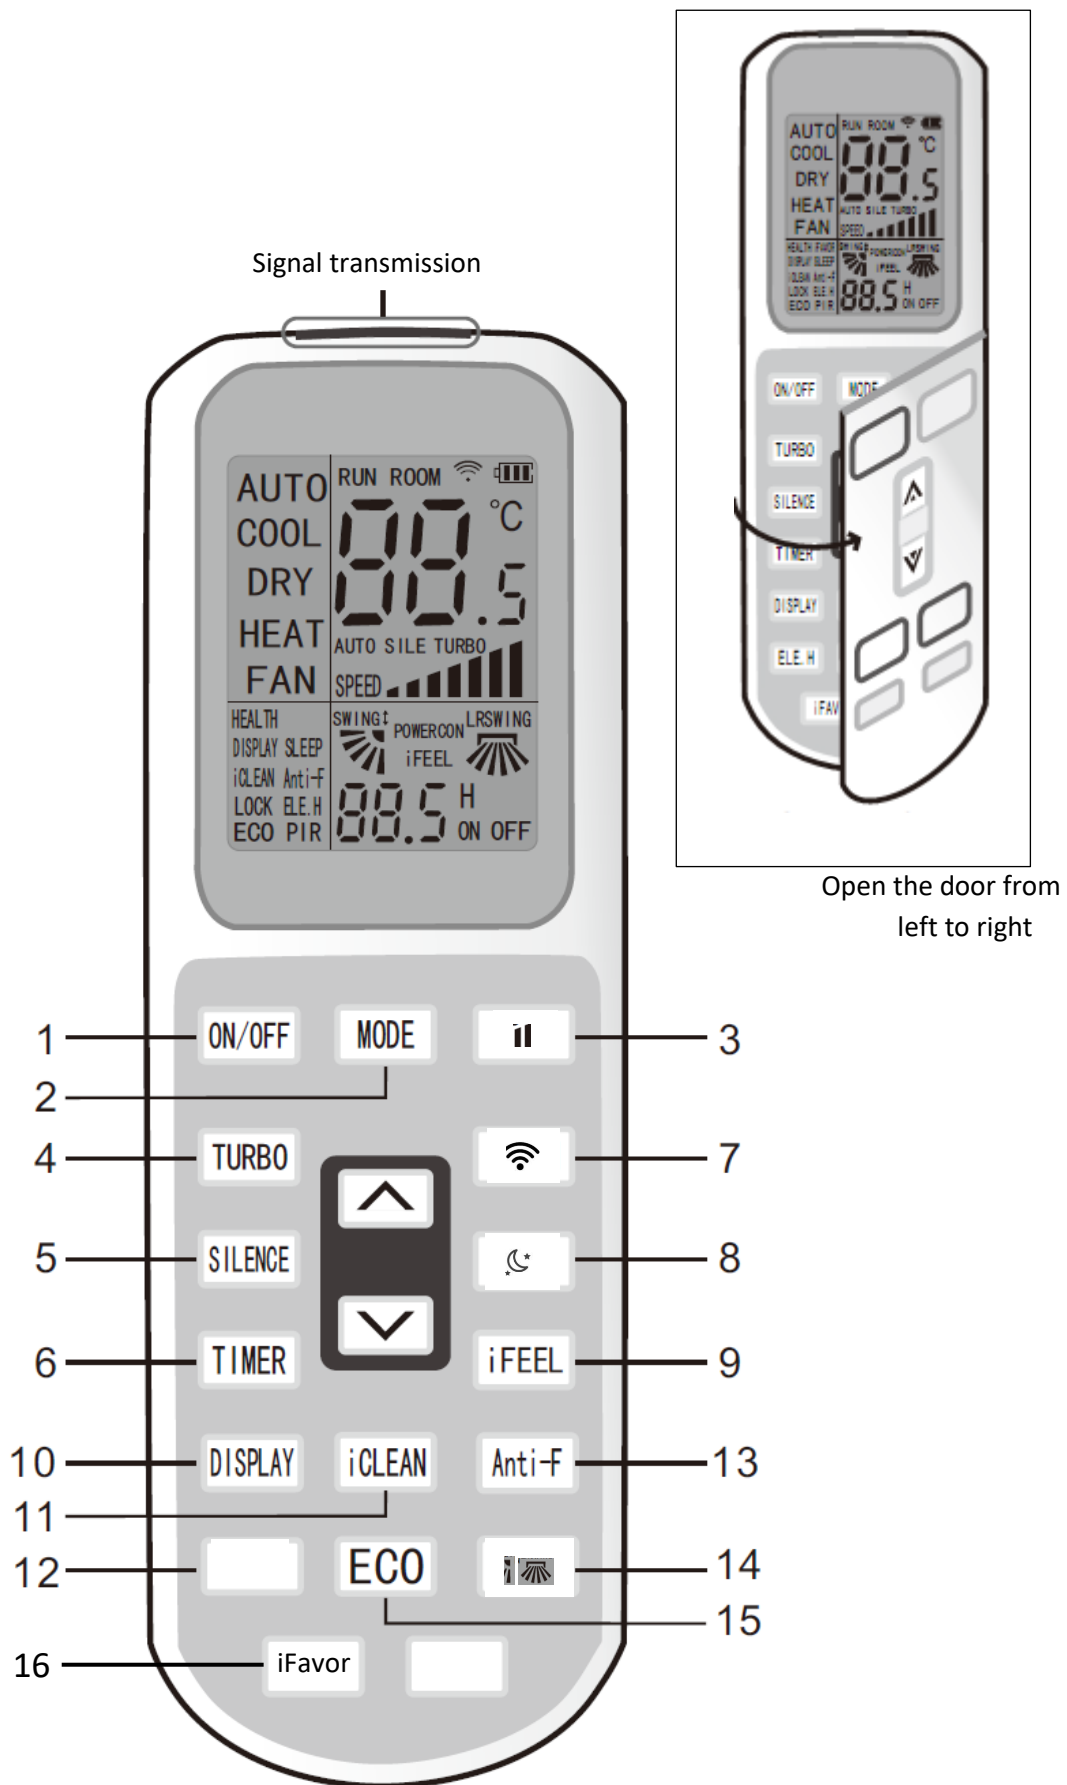


Description of the keys

1- "ON/OFF" key.


- Press the key. The unit will be switched on or off. The on/off key may stop the timer or the sleeping function.


2- "MODE" key.

 - Press the MODE key. You can select the operating mode.



3- " " key.

 - Press the  key. You can select the ventilation speed.



4- "TURBO" key.

- Press the TURBO key. The symbol appears.
- The TURBO function is valid in cooling or heating mode but not in auto, dry and fan mode.

5- "SILENCE" key.

- Press the SILENCE key. The "SILE" symbol appears.
- The function reduces the ventilation to the minimum (20 dB).



6- "TIMER" key.

 
- The time range can be set from 0.5 to 24 hours (0.5 = 30 min) in increments of 0.5.
- The function stops the unit depending on the estimated time.

7- " " key.

- This button is used for the WIFI function.

8- " " key.

- Press the  key. The symbol appears.
- The air conditioner operates in sleep mode for 10 hours.
- The  mode automatically adjusts the target temperature during the night:
 - Energy savings.
 - Optimal comfort level.
 - Minimum noise level (20 dB).

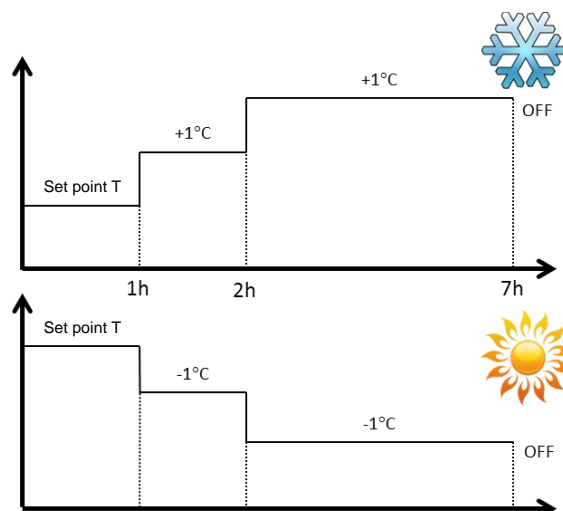

9- "IFEEL" key

- The reference temperature is on the remote control.
- Every 3 minutes, the remote control sends the temperature read by the internal sensor (at the rear of the remote control).
- If there is no response after 10 minutes, the "IFEEL" function is disconnected.
- Press this key to validate the "IFEEL" function.
- The LCD indicates the actual room temperature.
- This function is not active when the appliance is in fan mode.

10- "DISPLAY" key.

- In display mode, press the button, switch off the screen and press again. The LCD indicates the room temperature and the setpoint after flashing for 5 seconds.

11- "ICLEAN" key.

- When the remote control is off, press the "ICLEAN" key. The unit switches to low ventilation speed. "CL" appears on the indoor unit and the appliance performs the "iclean" function. The purpose of this function is to clean any dust from the evaporator and dry up any water inside to prevent unpleasant odours. To stop the "iclean" function, press the "iclean" button or the "on/off" key. If uninterrupted, the "iclean" function will stop after 30 minutes.

12- The key is not used.

13- "ANTI-FUNGUS" key.

- When the remote control is off, press the "ANTI-FUNGUS" key.
- After using in cooling mode, dehumidification or ventilation.
- The function prevents bacteria and mould from forming to guarantee a healthy environment.
- The fan operates for 3 minutes to dry the coil.
- The indoor unit emits 5 long beeps and 3 short beeps when this function is activated.
- The indoor unit emits 5 long beeps and 5 short beeps when this function is deactivated.

14- " " key

- Press the key. Automatic switching mode is active.

15- "ECO" key.

- Press this key in cooling mode. The appliance operates in economy mode.
- Up to 35 % saving
- After operating for 8 hours, it stops automatically.

16- "i Favor" key.

- This function allows the appliance to operate under previously saved conditions (operating mode, fan speed, temperature, shutter position).
- Press and hold the "IFavor" key for 3 seconds until the remote control displays the "IFavor" icon, which flashes 3 times, indicating that the conditions have been saved.
- Once the conditions have been recorded, pressing the "IFavor" button saves the conditions.

Operation

- Insert the batteries





1. Slide the cover in the direction shown.
2. Insert two new AAA batteries, observing the polarity (+ and -).
3. Refit the cover.

- Automatic mode.

- 1- To switch on the air conditioner, press the ON/OFF key.
- 2- Press the HEAT or COOL key to select the mode.
- 3- Press the SPEED key to select the ventilation speed (LOW, MID, HIGH, AUTO).
- 4- To switch off the air conditioner, press the ON/OFF key.

- Setting the temperature.

- 1- To switch on the air conditioner, press the ON/OFF key.
- 2- Press the HEAT or COOL key to select the mode.
- 3- Press the "  " or "  " key to set the temperature. The temperature range is 16 - 32 °C in increments of 1 °C.
- 4- Press the SPEED key to set the ventilation speed.
- 5- Press again to switch off the air conditioner.

- Ventilation mode.

- 1- To switch on the air conditioner, press the ON/OFF key.
- 2- Press the HEAT or COOL key to select the mode.
- 3- Press the SPEED key to set the ventilation speed.
- 4- Press again to switch off the air conditioner.

- Dehumidification mode.

- 1- To switch on the air conditioner, press the ON/OFF key.
- 2- Press the MODE key and select dehumidification mode.
- 3- Press the SPEED key to set the ventilation speed.
- 4- Press the ON/OFF key again to switch off the air conditioner.

- Manual mode.

1- Press the button using a screwdriver.

2- The air conditioner operates in auto mode with a target temperature of 24 °C



BDR THERMEA France

57 rue de la gare

F-67580 Mertzwiller



Better performance

Less pollution

Copyright:

All technical information contained in this manual, as well as any drawings and electrical diagrams supplied, remain our property and cannot be reproduced without our prior consent in writing